

**CA550-SP**  
**Skid Plate for 2014 and Newer**  
**Can Am Spyder RT**

**NOTE: This Skid plate fits only when used with the Rivco Bumper # CA550, it will NOT mount to the Spyder directly.**


1. Lay out and familiarize yourself with the supplied components and hardware. Place the front of the Spyder up on ramps or blocks at least 8 inches off the floor. Be certain the Spyder is secure and the parking brake is locked.
2. If you are installing the front bumper at the same time follow the instructions for the bumper and install it completely.
3. Refer to photo (1A) and remove the two Torx screws on the left and right side.
4. Install the left and right skid plates loosely reusing the Torx screws.
5. Place the supplied washers onto the supplied screws. Hold the center section of the skid plate up in place and align its holes with the holes of the center section and screw holes in the bumper mounting plate (Photo 1B). Start the four screws into the holes.

**NOTE: The center section covers the outer plates**

6. Tighten the Torx screws on the left and right sides of the skid plate first then the four center screws securely.



440 S. Pine St, Burlington, WI 53105  
Toll Free: 800-801-8222 Fax: 262-763-8949  
[WWW.RIVCOPRODUCTS.COM](http://WWW.RIVCOPRODUCTS.COM)

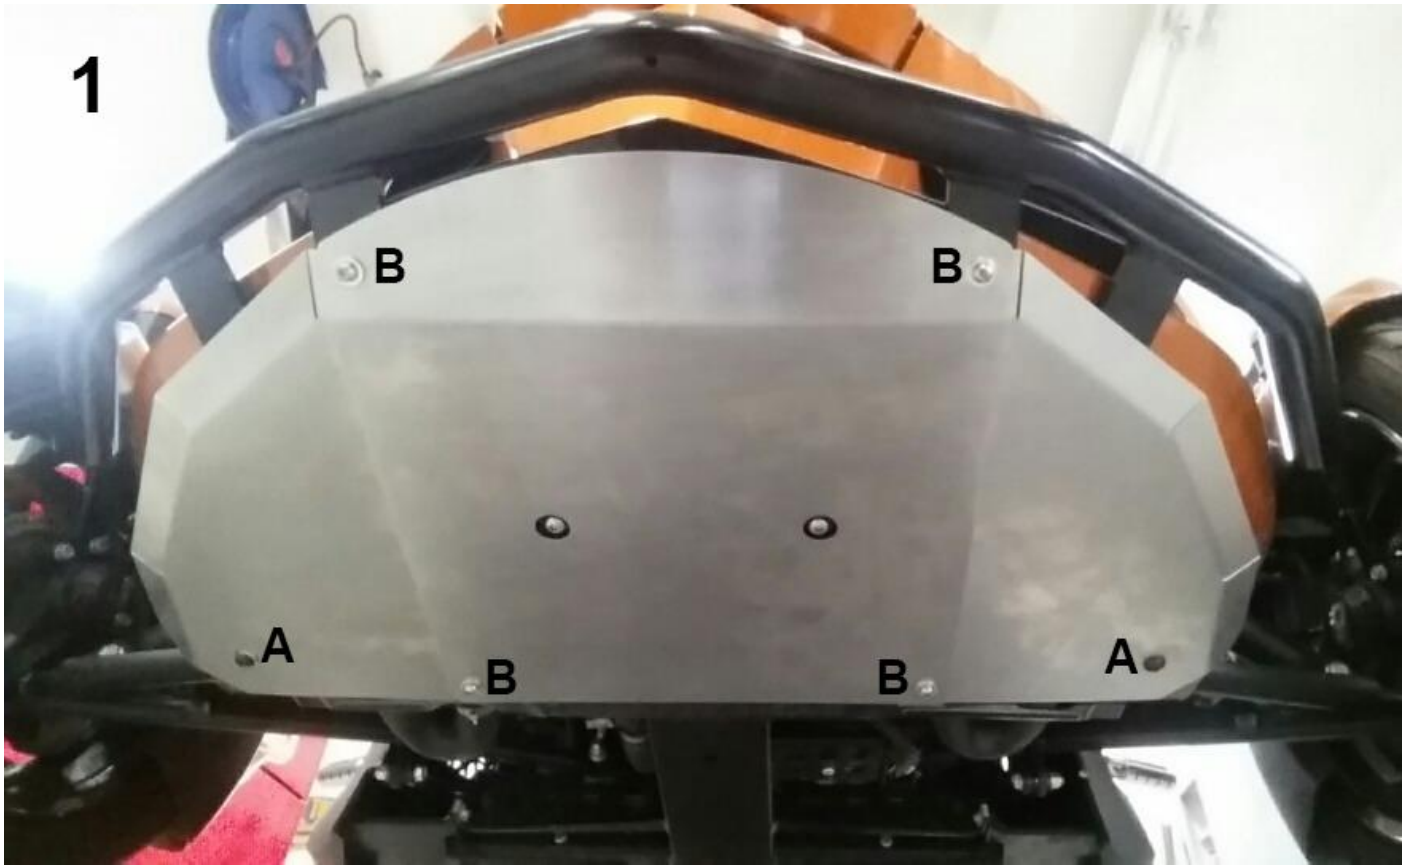

440 S. Pine St, Burlington, WI 53105  
Toll Free: 800-801-8222 Fax: 262-763-8949  
[WWW.RIVCOPRODUCTS.COM](http://WWW.RIVCOPRODUCTS.COM)